

-- IMPORTANT --
SAFETY DATA ON TANNER[®] DE-ICING UNITS

TANNER[®] DE-ICERS, MODELS: T-83, T-85, T-87, T-89 or T-90

MAXIMUM WORKING PRESSURE is 200 p.s.i.g.
Maximum Internal Air Temperature is 150° F.
DO NOT EXCEED these limits!

**LOCATION – DO NOT locate near fire, intense lamps or other excessive heat.
Install unit as close as possible to freezing problem.**

INSTALLATION – DO NOT support units by hoses or pipe alone.

FILLING –

- **READ product LABELS and MSDS prior to filling.**
- **Use only TANNERGAS[®]/FREEZE-BAN or NO-TOX2[®] fluids in these units.**
- **DO NOT SMOKE while filling or handling!!**
- **If filling under pressure, first bleed air SLOWLY from tank through Fill Plug R-20 or Bleed Plug R-36.**
- **AVOID SPILLS! If spilling should occur handle in accordance with your company policy and local, state and federal regulations.**

ADJUSTING –

DO NOT REMOVE Adjusting Screw R-34 completely when unit is under pressure – refer to Parts/Instruction sheet included with each De-Icer.

TANNER[®] TANKS, MODELS: T-30A, T-40A or T-60

MAXIMUM WORKING PRESSURE is 200 p.s.i.g.

LOCATION – DO NOT locate near fire, intense lamps or other excessive heat.

INSTALLATION –

Refer to Form TT-IN and TTP for placement and complete instructions.

FILLING –

- **READ product LABELS and MSDS prior to filling.**
- **Use only TANNERGAS[®] fluid in these units.**
- **DO NOT SMOKE while filling or handling!!**
- **When filling UNDER PRESSURE, be sure that proper VALVES ARE CLOSED.**
- **BLEED AIR SLOWLY from tank when opening Gate Filling Valve W-16.**
- **AVOID SPILLS! If spilling should occur, handle in accordance with your company policy and local, state and federal regulations.**

-- IMPORTANT --
SAFETY DATA ON TANNER[®] DE-ICING UNITS

TRI-FLUID INJECTORS, MODELS: TFI-3.4 or TFI.86

MAXIMUM WORKING PRESSURE is 150 p.s.i.g. (500 p.s.i.g. with modifications)
(5 p.s.i.g. for H-23 Reservoir – refer to Form TFI-TP)

LOCATION – DO NOT locate near fire, intense lamps or other excessive heat.

INSTALLATION – Refer to Form TFI-INS for placement and complete instructions.

FILLING –

- **READ product LABELS and MSDS prior to filling.**
- **Use TANNERGAS[®], NO-TOX2[®] or FROSTO[®] fluid in these units.**
- **DO NOT SMOKE while filling or handling!**
- **TURN OFF all ELECTRICAL SERVICE to unit prior to filling.**
- **TURN OFF ¼" air inlet Valve H-05 and ½" fluid outlet Valve H-17 prior to filling.**
- **BLEED AIR PRESSURE SLOWLY from Supply Tank H-23 by SLOWLY opening Fill Plug H-23A.**
- **AVOID SPILLS! If spilling should occur handle in accordance with your company policy and local, state and federal regulations.**

NOTE: ALL PARTS AND INSTRUCTIONS SHEETS REFERRED TO ON THIS FORM ARE AVAILABLE ON OUR WEBSITE.

TANNER SYSTEMS, INC.
P.O. Box 488 * St. Joseph, MN 56374
Phone: (320) 363-1800
Toll Free: (800) 461-6454
FAX: (320) 363-1812

Website: www.tannersystems.com * Email: info@tannersystems.com