

-- IMPORTANT --
SAFETY DATA ON TANNER® DISPENSING UNITS

TANNER® SYSTEMS COMPACT DISPENSER MODELS: T-83, T-85, T-87, T-89, T-90

MAXIMUM WORKING PRESSURE is 200 p.s.i.g.
Maximum Internal Air Temperature is 150° F.
DO NOT EXCEED these limits!

LOCATION – DO NOT locate near fire, intense lamps or other excessive heat.
Install unit as close as possible to freezing problem.

INSTALLATION – DO NOT support units by hoses or pipe alone.

FILLING –

- **READ** product LABELS and SDS prior to filling.
- Use only TANNERGAS®/FREEZE-BAN or NO-TOX2® fluids in these units.
- **DO NOT SMOKE** while filling or handling!!
- If filling under pressure, first bleed air **SLOWLY** from tank through Fill Plug R-20 or Bleed Plug R-36.
- **AVOID SPILLS!** If spilling should occur handle in accordance with your company policy and local, state and federal regulations.

ADJUSTING –

DO NOT REMOVE Adjusting Screw R-34 completely when unit is under pressure – refer to Parts/Instruction sheet included with each De-Icer.

TRI-FLUID INJECTORS, MODELS: TFI-A or TFI-B
--

MAXIMUM WORKING PRESSURE is 150 p.s.i.g. (500 p.s.i.g. with modifications)
(In 2014, TFI-A & TFI-B replaced TFI.86 & TFI3.4)

LOCATION – DO NOT locate near fire, intense lamps or other excessive heat.

INSTALLATION – Refer to Form TFIA-B INS for placement and complete instructions.

FILLING –

- **READ** product LABELS and SDS prior to filling.
- Use TANNERGAS®, NO-TOX2® or FROSTO® fluid in these units.
- **DO NOT SMOKE** while filling or handling!
- **TURN OFF** all ELECTRICAL SERVICE to unit prior to filling.
- **TURN OFF** ¼" pad airline at tank using the ball valve next to pressure regulator (H-26).
- **BLEED AIR PRESSURE SLOWLY** from Supply Tank H-23 by **SLOWLY** opening the 1 ½" pipe cap on the 45° elbow on the side of the tank. Do not **OVERFILL**.
- **AVOID SPILLS!** If spilling should occur, handle in accordance with your company policy and local, state and federal regulations.

-- IMPORTANT --

SAFETY DATA ON TANNER® DISPENSING UNITS

TANNER® TANKS, MODELS: T-30A, T-40A or T-60
--

MAXIMUM WORKING PRESSURE is 200 p.s.i.g.
(Higher pressure available by special order)

LOCATION – DO NOT locate near fire, intense lamps or other excessive heat.

INSTALLATION –

Refer to Form TT-IN and TTP for placement and complete instructions.

FILLING –

- **READ** product LABELS and SDS prior to filling.
- Use only TANNERGAS® fluid in these units.
- **DO NOT SMOKE** while filling or handling!!
- When filling **UNDER PRESSURE**, be sure that proper **VALVES ARE CLOSED**.
- **BLEED AIR SLOWLY** from tank when opening Gate Filling Valve W-16.
- **AVOID SPILLS!** If spilling should occur, handle in accordance with your company policy and local, state and federal regulations.

NOTE: ALL PARTS AND INSTRUCTIONS SHEETS REFERRED TO ON THIS FORM ARE AVAILABLE ON OUR WEBSITE.

TANNER SYSTEMS, INC.
P.O. Box 488 * St. Joseph, MN 56374
Phone: (320) 363-1800
Toll Free: (800) 461-6454
FAX: (320) 363-1812

Website: www.tannersystems.com * Email: info@tannersystems.com